
Eng – TV Brand: Hisense Model: A7500F

TV Front

TV Front

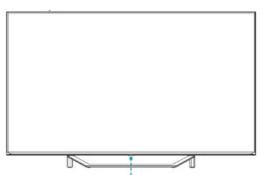

Single button (Remote sensor / Power indicator / Standby)

ItemDescription	
Remote sensor	Receive remote signals from the remote control. Do not put anything near the sensor, as its function may be affected.
Power indicator	The light is red in standby mode.
Standby / Source	Press the single button when in standby mode, TV will be turned on. Press the single button to call up the menu, when the focus is on "Power Off", wait for 3 seconds, then the TV will go into standby mode automatically.
	/ Press the single button to call up the menu and then select among the different input signal sources.


■ NOTES

- · The Picture is Only for Reference.
- Powering on the TV requires several seconds to load programs. Do not rapidly turn the TV off as it may cause the TV work abnormally.

TV Rear

TV Rear

shock.

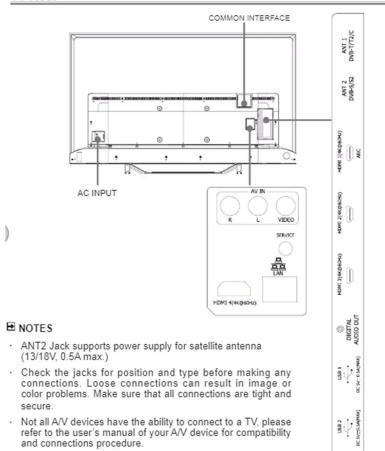


 Before connecting external equipment, remove the mains plug from the wall socket. Otherwise, it may cause electric

Remote Control



Remote Control

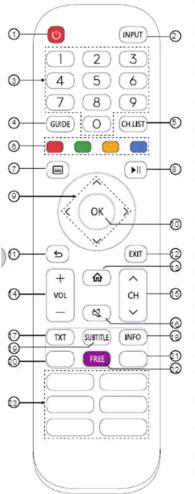

- POWER: Switch the TV on or into standby mode
- ② INPUT: Select input sources
- 3 Number button: Direct channel selection or numbers input
- GUIDE: Display the Electronic Program Guide (DTV mode)
- (5) CH.List: Display the Channel List on the screen
- Special function buttons
- Display the Quick setup menu
- Media content control function buttons
- 10 OK: Confirm the selection in the OSD menus
- 1 BACK: Return to previous menu
- 12 EXIT: Exit the menu
- (13 HOME: Enter the Smart
- 1 VOL+ /-: Adjust the volume
- ⊕ CH ^ / ∨ : Switch channel
- MUTE: Mute or restore the TV sound
- 17 TXT: Turn on/off the teletext function
- (1) INFO: Display the present program information
- SUBTITLE: Activate or deactivate the subtitle mode
- MUSIC: Quick access to MUSIC Quick access to the app
- ART: Quick access to ART Quick access to the app
- FREE: Quick access to FREE
- Quick access buttons to apps MEDIA: Enter the media mode

: All Apps

BROWSER: Enter into BROWSER

NOTE: The included remote control will vary depending on model, country. Check information according to the actual remote control in the accessory bag.