

ENG: DVD PLAYER

Accessories

When opening the box, please check with following accessories inside the box, if there is any shortage, please contact us ASAP.


1. Remote Control
2. AV Cable
3. HDMI Cable
4. User Manual

Installing Battery Into Remote Control

Open the battery compartment cover, insert two batteries by matching its pole, then close the compartment cover.

System Connection

1. Before connecting, please shut down all devices electrical source. After finishing installation then put the electrical source through.
2. Video cable connect should be based on its color and must be correctly connected, especially the plugs should be installed firmly.
Yellow plug: video terminal
White plug: audio left soundtrack terminal
Red plug: audio right soundtrack terminal
3. Sketch map of connection:

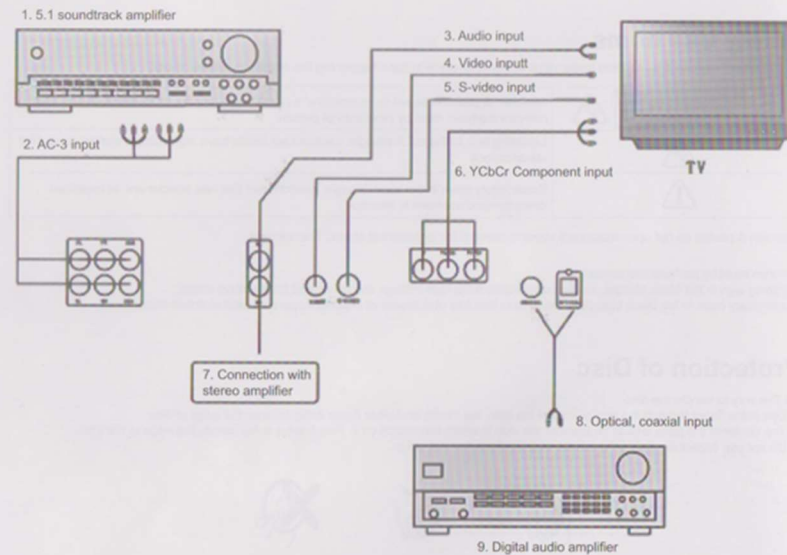

Instruction of Function

1. Power Button
When pressing power button of remote control, it can switch to normal working or waiting state. (Using this function button, the power is about 10W.)
2. Open/Close Tray
This button can open/close tray.
3. Play
This button can realize the normal play function of machine.

4. Pause
Press this button once, the player will pause to play, press the play button return to play.
5. Stop
While playing disc, press stop button once, it will be stopped in the current progress. Press stop button twice which will be played from beginning by press play button.
6. Return
While playing super VCD/VCD2.0 disc and PBC function is on, press return button, it can return to VCD menu.
But when PBC function is off, return button can not be used.
7. Previous/Next
Previous button: press this button to choose previous song or chapter when playing.
Next button: press this button to choose next song or chapter when playing.
8. Reverse/Forward
Short press reverse/forward button go into state of reverse or forward;
Long press reverse or forward button, TV display will circle display:
Circle display:
① ◀2x ▶2x
② ◀4x ▶4x
.....
Press play button it will directly revert to play state.
9. Step
Press this button to continuous browsing pictures one by one. Press the play button to stop.
10. Number button (0-10+)
You can choose song or chapter by number button. For example, if you want to choose 10, first press 10+, then press 0 button.
11. Time
This function is used for setting specific time.
Press search button on remote control, and press the number button (0-9, 10+) on remote-control, according to the location of cursor, input title/chapter/song that you want to watch or input whole disc search time.
12. Slow
Press slow playing button to go into the state of slow playing.
Press the play button to go into normal state.
13. Repeat
Pressing this button can replay title/chapter (DVD Disc) or single song/whole disc (VCD Disc) that have been selected by you.
14. Snippet Repeat A-B
(1). Press A-B button to determine the start point A, TV display will show: repeat A-, press A-B button to determine the end point B, TV display will display repeat A-B, and then automatically return to A point and repeat play snippet which has been selected from A to B.
(2). Press A-B button for the third time, cancel repeat A-B and return to normal play.
15. Program
Program playing(PROG function).
16. Clear
This button is only used for PROG function.
17. OSD (Display)
Press display button, the player will display according to the content and style of the disc.
18. ZOOM
Magnify picture.
19. NTCS/PAL/AUTOMATIC
This button can automatically switch DVD output (NTCS/PAL/ AUTOMATIC), in order to match DVD NT CS/PAL/ AUTOMATIC with TV NT CS/PAL/ AUTOMATIC.
If there is no color on the TV display, please press this button and it can automatically switch to color picture output or set it at organize menu.
Attention: when it is displayed by two parts, if there is phenomenon of no image output, please set your TV NTCS/PAL/AUTOMATIC as same as DVD NTCS/PAL/AUTOMATIC.
20. Video
This button can switch to TV-RGB, P-SCAN, YPbPr, PC-RGB automatically.
Please switch video model to TV-RGB if you TV has Separate Video / S-video, and switch video model to P-SCAN YPbPr if you TV has YPbPr/YCbCr component input.
(Note: NIT of TV and NIT of DVD must match, otherwise there is no color image or image or so on phenomenon.)
Please switch video model to PC-RGB when you use VGA computer display.
21. Menu
Press this button when there is a DVD disc inside, it will return to menu, there is no function if there is other disc inside.
22. Title
Pressed this button, it will stop play and return to title menu, choose menu by pressing direction button or turn page by pressing previous or next button.
23. Subtitle
When play DVD disc which includes many kinds of languages, you can choose different languages subtitle which include in this disc by using this button.
24. Angle
Some of the disc have different angle's pictures, you can press angle button to choose appropriate from different angles while playing many kinds of angle picture.