


Model: **HISENSE HS622E10W**

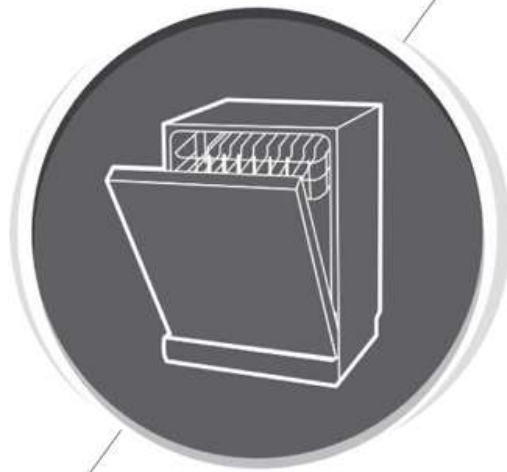

Dishwasher

Instruction Manual


PARTE I : Versión Genérica

Model: **HISENSE HS622E10W**

QUICK USER GUIDE

USING YOUR DISHWASHER

Control Panel

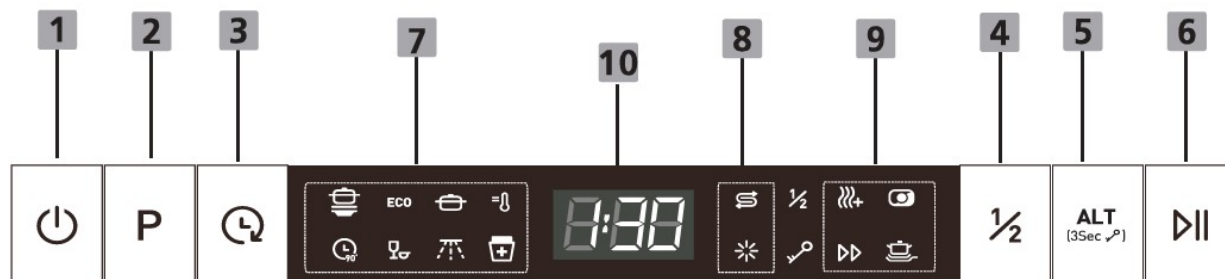

Button Operation

1. **Power** - Press this button to turn on your dishwasher; the display will light up.
2. **Program** - Press this button repeatedly to select the appropriate wash program; the indicator for the selected program will light up.
3. **Delay** - Press this button to set the delay time for the wash. You can delay the start of the wash for up to 24 hours. One press of the button delays the wash by 1 hour.
4. **Half Load** - you can select this function to save energy if the dishwasher is half full. (This can only be used with Intensive, Universal, ECO, Hygiene, and 90 min. programs.)
5. **Functions** - Press the button to select a function; the corresponding indicator will light up. This option allows you to lock the buttons on the control panel—except the Power button—so that children cannot accidentally start the dishwasher by pressing the buttons on the panel. To lock or unlock the control panel buttons, press and hold the button for 3 seconds.
6. **Start/Pause** - Use to start or pause the selected wash program when the dishwasher is running.

Display

7. Dishwasher Modes Indicators:

 **Intensive** – for heavily soiled items include pots and pans, where food has also dried.

 **Eco** - This is the standard program suitable for normally soiled loads, such as pots, plates, glasses, and dirty pans.

 **Universal** - For normally soiled loads, such as pots, plates, glasses, and lightly soiled pans.

 **Hygiene** - Use it to sanitize your dishes

 **90 Min** - For normally soiled loads that need a quick wash.

 **Rapid** - A shorter wash for lightly soiled loads that do not need drying.

 **Rinse** - Used to rinse dishes while waiting to complete the dishwasher load.

 **Self-Cleaning Programme** - Self-cleaning program for the hygienic cleaning of the dishwasher tub, spray arms, and spray tubes.

8. **Maintenance Indicators:**
- Rinse aid** - If the indicator “  ” is lit, it means that the dishwasher is low on rinse aid and requires a refill.
- Salt** - If the indicator “  ” is lit, it means that the dishwasher is low on salt and needs to be refilled.
9. **Additional Mode Indicators:**
-  **Extra Drying** - For better drying results (This can only be used with Intensive, Universal, ECO, Hygiene, and 90 min.)
-  **All in One** - For normally soiled loads. (This can only be used with Intensive, Universal, ECO, Hygiene, and 90 min.)
-  **Speed Wash** - This option shortens the program time. (This can only be used with Intensive, Universal, ECO, Hygiene, and 90 min.)
-  **Power Wash** - For washing heavily soiled dishes. (This can only be used with Intensive, Universal, ECO, Hygiene, and 90 min.)
10. **Number Display** - Shows the remaining time, delay time, and error code.

Starting a Wash Cycle

1. Pull out the upper and lower baskets, load the dishes, and push them back. It is recommended to load the lower basket first and then the upper one.
2. Pour in the detergent.
3. Close the door and press the Power button to turn on the machine.
4. Select a program; the response light will illuminate. Then press the Start/Pause button, and the dishwasher will begin its cycle.

Changing the Program Mid-Cycle

A wash cycle can only be changed if it has been running for a short time; otherwise, the detergent may have already been released, and the dishwasher may have already drained the wash water. If this is the case, the dishwasher needs to be reset and the detergent dispenser refilled. To reset the dishwasher, follow the instructions below:

1. Press the Start/Pause button to pause the wash.
2. Press and hold any program button for more than 3 seconds; the program will be cancelled.
3. Press the required program button to select the desired program.

Model: **HISENSE HS622E10W**

ERROR CODES

If there is a malfunction, the dishwasher will display error codes to help identify the cause:

Codes Meanings & Possible Causes:

E1 Longer inlet time - The taps are not open, or the water inlet is restricted, or the water pressure is too low.

E3 Required temperature not reached - Malfunction of the heating element.

E4 Overflow - Some element of the dishwasher is leaking.

Ed Communication failure between the main PCB and the display PCB - Circuit cut or wiring broken for communication.

WARNING

If an overflow occurs, shut off the main water supply before calling technical support.

If there is water in the base tray due to an overflow or a small leak, the water must be removed before restarting the dishwasher.