 


ENG – FRIDGE/FREEZER

BRAND: BECKEN

MODEL: BSBS2355 IX

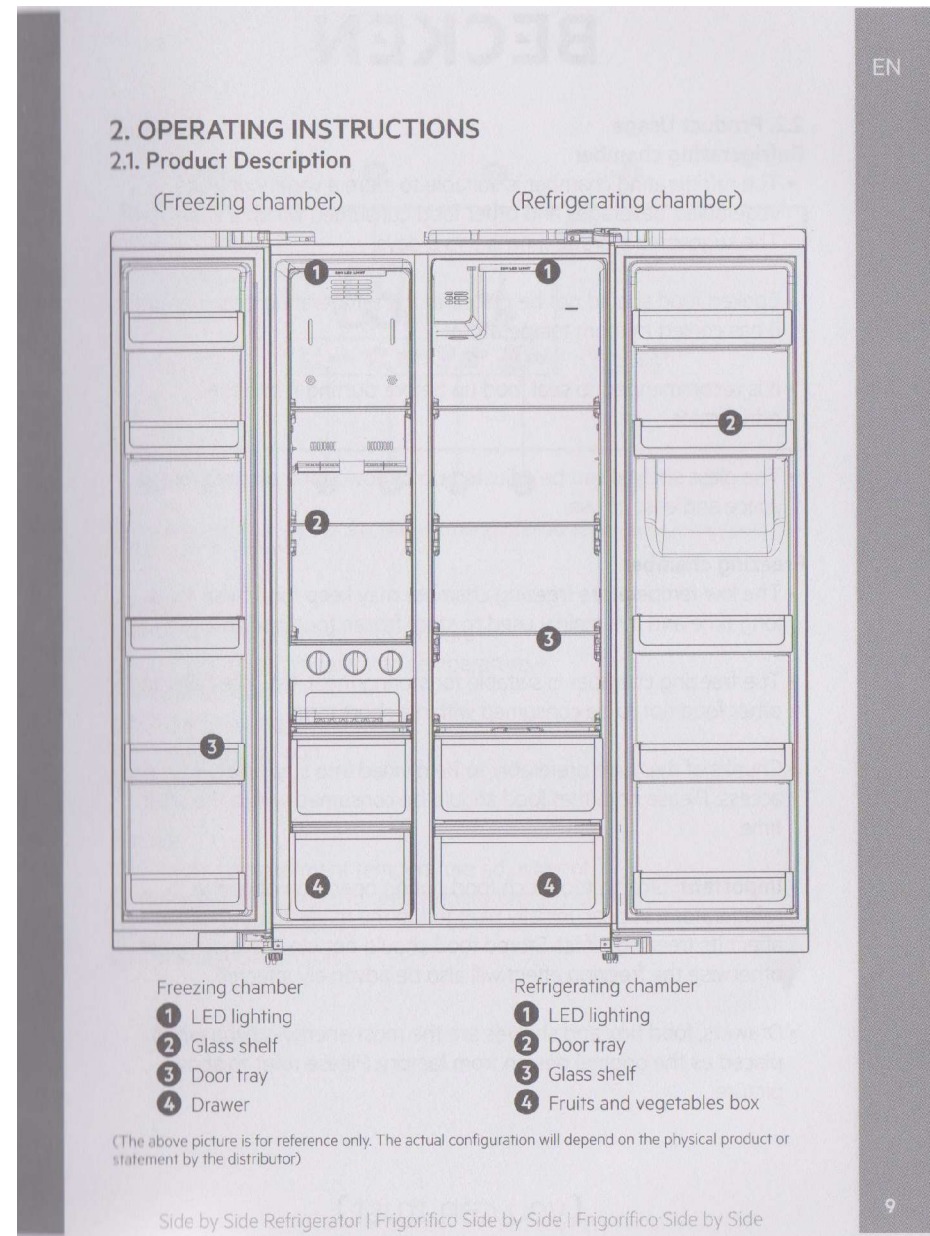

2.2. Product Usage

Refrigerating chamber


- The refrigerating chamber is suitable to store a variety of fruits, vegetables, beverages and other food consumed within a short term. The suggested storage time is 3 to 5 days.
- Cooked food should not be placed in the refrigerating chamber until it has cooled to room temperature.
- It is recommended to seal food up before putting it into the refrigerator.
- The glass shelves can be adjusted up or down for a proper storage space and ease of use.

Freezing chamber

- The low temperature freezing chamber may keep food fresh for a long time and it is mainly used to store frozen food and to make ice.
- The freezing chamber is suitable for storing meat, fish, rice balls and other food not to be consumed within a short term.
- Chunks of meat are preferably to be divided into small pieces for easy access. Please note that food should be consumed within the shelf time.
- **Important:** Storing too much food during operation once the refrigerator has been initially plugged to the mains may adversely affect its freezing effect. Stored food should not block the air outlet, otherwise the freezing effect will also be adversely affected.
- Drawers, food box and shelves are the most energy-saving when placed as the original design from factory. Please refer to above picture.

[you can trust]

Functions

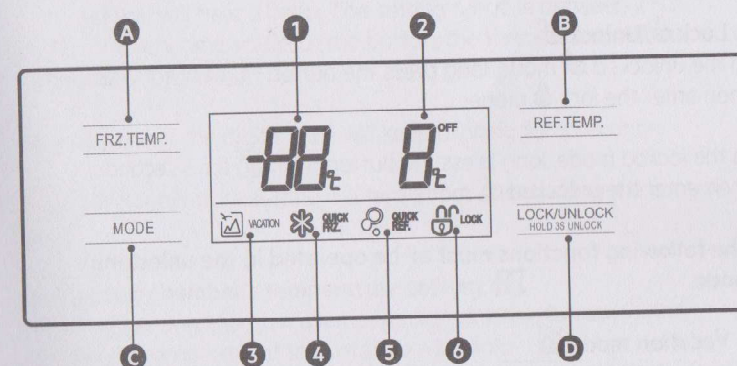

(The above picture is for reference only. The actual configuration will depend on the physical product or statement by the distributor)

Display

- 1 Freezer compartment temperature
- 2 Refrigerating compartment temperature
- 3 Vacation icon
- 4 Quick Freezing icon
- 5 Quick Cooling icon
- 6 Lock/unlock icon

Button


- A Freezer compartment temperature adjustment
- B Refrigerating compartment temperature adjustment
- C Mode function/setting
- D Lock/unlock controls

BECKEN

7. Ice Maker Usage

1. Gently pull out the ice tray and fill it with water until the water level line. Then, carefully place the ice tray horizontally.

2. When the ice cubes are frozen and ready to be used, turn the corresponding knob clockwise (turn to the end and release). The ice cubes will drop from the ice tray into the ice box.

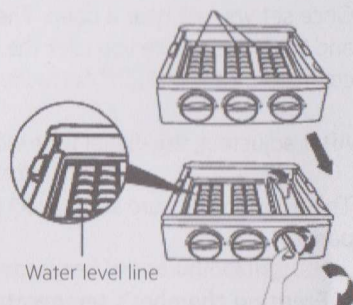

* Picture for illustration purposes only

Notes:

In order to quickly prepare ice cubes quickly, set the freezer to the lowest temperature, or select the Quick Freeze Mode. This will lower the freezer's temperature.

Do not over-fill the trays with water. It may become difficult to remove the ice cubes from ice tray and any trickle of water in the ice box structure will freeze the ice cubes together.

If the knob is turned before the ice cubes are ready, any remaining water will trickle into the ice box and will freeze the ice cubes together.

8. Storage upon power failure

In case of a power failure, the refrigerator's current mode will be locked and maintained until power is restored.

9. Opening warning and alarm control

When opening the refrigerator's doors, the opening music will play. If the door is not closed within two minutes, the buzzer will beep once every minute until the door is closed. Press any button to stop the buzzer alarm.


10. Error code

The following warnings that appear on the display show the refrigerator's corresponding faults. Although the refrigerator may still have its cold storage function with the following faults, the user should contact a maintenance specialist for a maintenance check, so as to ensure the appliance's optimised operation.

Error Code	Fault Description
E1	Temperature sensor failure - refrigerating chamber
E2	Temperature sensor failure - freezing chamber
E5	Freezing/defrost sensor - detection circuit error
E6	Communication error
E7	Ambient temperature sensor error


BECKEN

Warnings for use

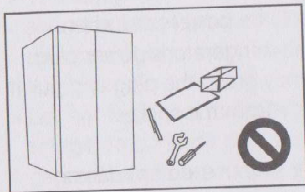

- Do not arbitrarily disassemble or reconstruct the refrigerator, nor damage the refrigerant circuit; any maintenance to the appliance must be conducted by a specialist.

- A damaged power cord must be replaced by the manufacturer, its maintenance department or related professionals in order to avoid any danger.

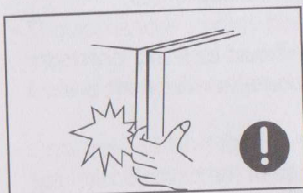


- The gaps between the refrigerator's doors and between the doors and the refrigerator's body are small; be careful not to put your hand in these areas to avoid squeezing your fingers. Please be gentle when closing the refrigerator's door to avoid articles from falling.

- Do not pick up foods or containers from the freezing chamber with your hands wets when the refrigerator is running, especially metal containers, in order to avoid a frostbite.



- Do not allow children to get into or climb the refrigerator; otherwise there is a risk of suffocation or injury due to falling down.


[you can trust]

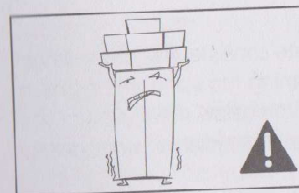


- Do not place heavy objects on top of the refrigerator considering that these may fall when closing or opening the door, and there is a risk of accidental injuries.

- Please unplug the unit in case of a power failure or when cleaning. Do not connect the freezer to a power supply within five minutes to avoid damages to the compressor due to successive starts.


Warnings for use

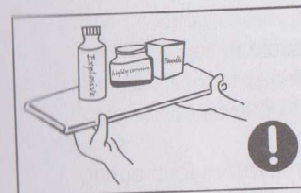

- Do not put flammable, explosive, volatile and highly corrosive items in the refrigerator or near it to avoid damages to the product or fire accidents.

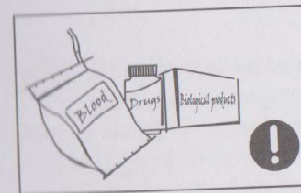

- The refrigerator is intended for household use, such as food storage and it shall not be used for other purposes, such as blood, drugs or biological products storage, etc.

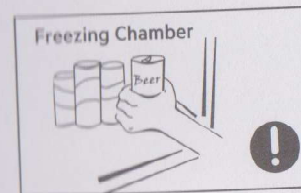

- Do not store beer, beverage or other fluid contained in bottles or enclosed containers in the refrigerator's freezing chamber; otherwise the bottles or enclosed containers may crack due to freezing and cause damages.

Side by Side Refrigerator | Frigorífico Side by Side | Frigorífico Side by Side